
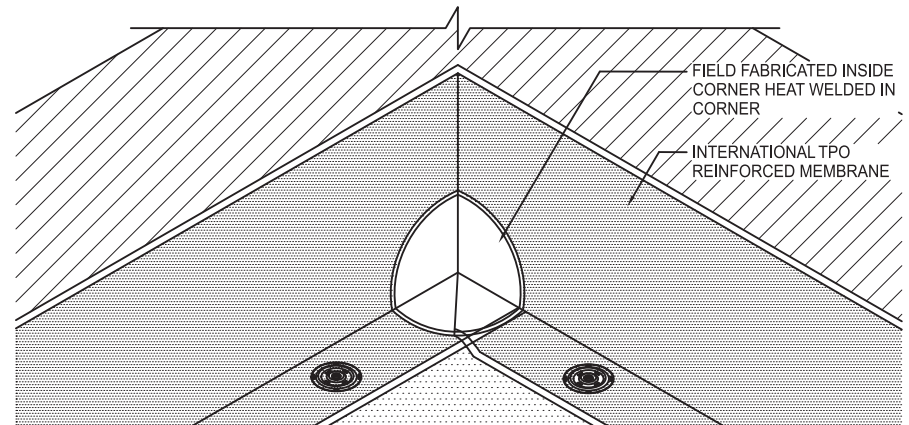


NOTE:

1. BONDING ADHESIVE REQUIRED BETWEEN MEMBRANE AND INSULATION FOR FULLY ADHEARED SYSTEMS.
2. PERIMETER BASE ATTACHMENT MAY BE FIELD FABRICATED OUT OF FREEDOM MEMBRANE OR USE STANDARD ACCESSORY.
3. APPLY INTERNATIONAL TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES.

INTERNATIONAL TPO

**BASE TIE-IN WITH PERIMETER
BASE ATTACHMENT**

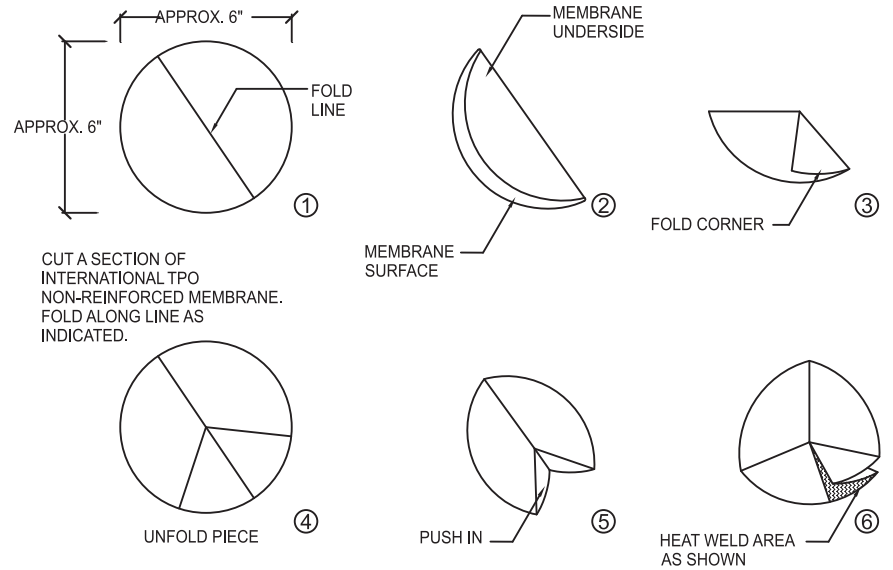

INTERNATIONAL TPO

INSIDE CORNER FABRICATION

